

# Mounting instructions

Side bar series: GM - GC- BM - BC

## **Nissan NV200** **Nissan E-NV200**



SW15 (54 Nm)








45 Min.

V1.00 - September 2021



## 72 KIT

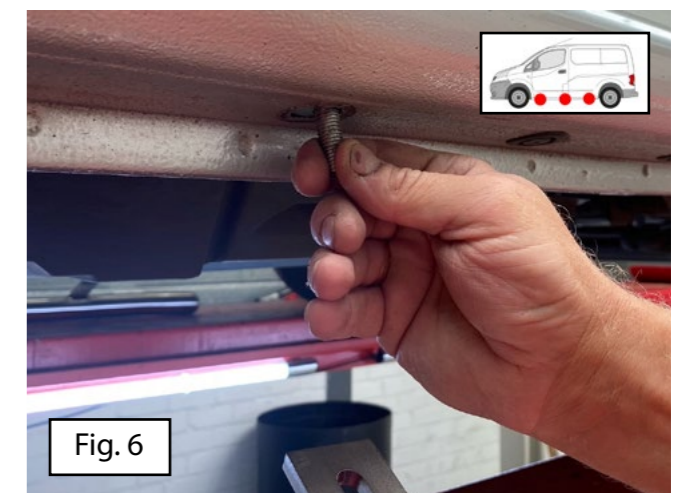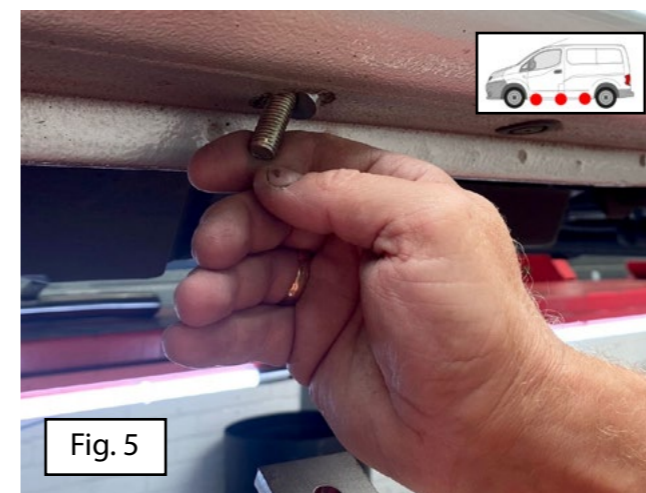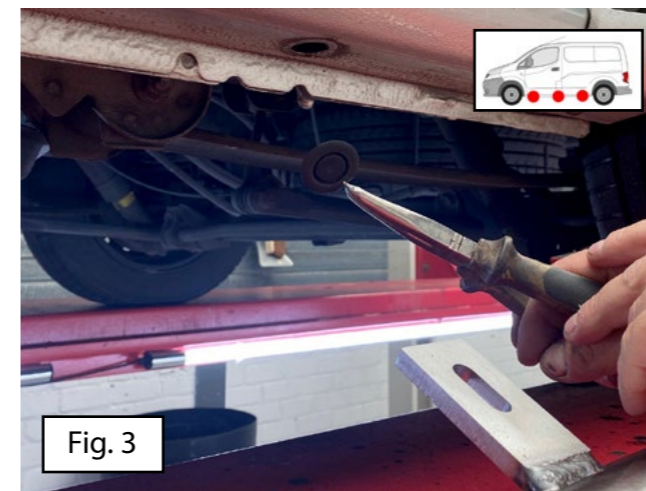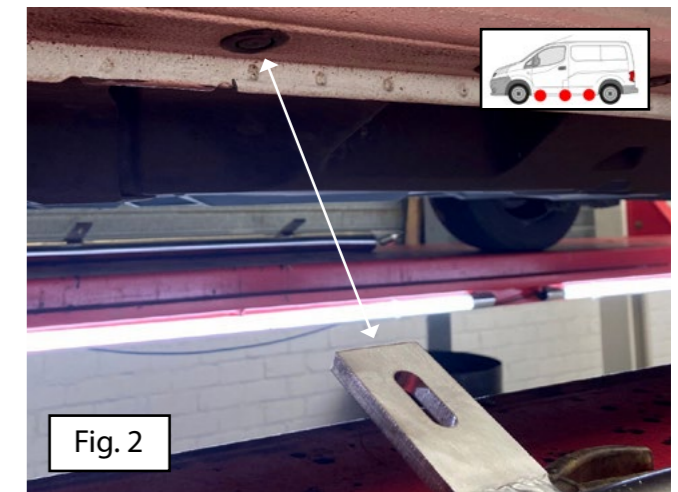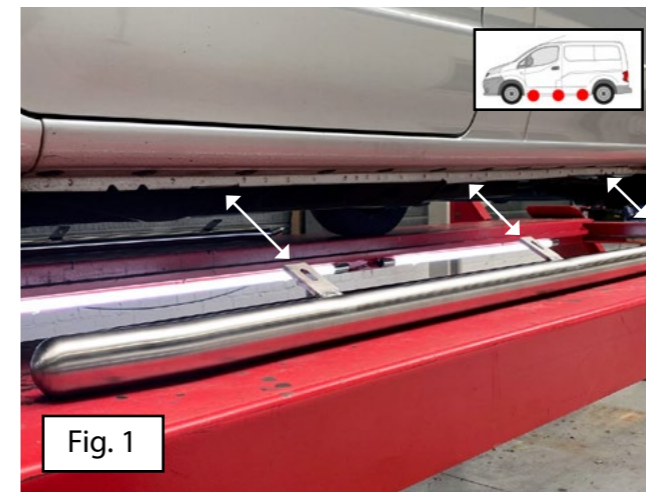

### Nissan NV200 / Nissan E-NV200 ORION 72KIT

1. Start mounting at the front left side.
2. Position the left side bar next to the car and check which rubbers you need to remove. ( Fig. 1 )
3. Remove the rubbers ( Fig. 2 + Fig. 3 )
4. Push the plate with thread ( 1 ) through the openings ( Fig. 4 + Fig. 5 + Fig. 6 )
5. When finished, push the black plastic rings ( 2 ) over the threads and push it up till you hit the chassis. ( Fig.7 + Fig. 8 )
6. When the three mounting points are ready, mount the side bars. Use the wisher ( 3 ) and the nut ( 4 ). Hand tighten the nuts and when you think the sidebars are well aligned with the van, tighten everything very well. ( 54 Nm ) ( Fig. 9 + Fig. 10 )
7. Ready? Start again at point one and read right where written left.

