



Mounting instructions: Sidebar series GM/GC/BM/BC/RM/RC

Opel Movano Renault Master Nissan NV400




SW17 (46Nm)



SW13 (23Nm)



60 Min.

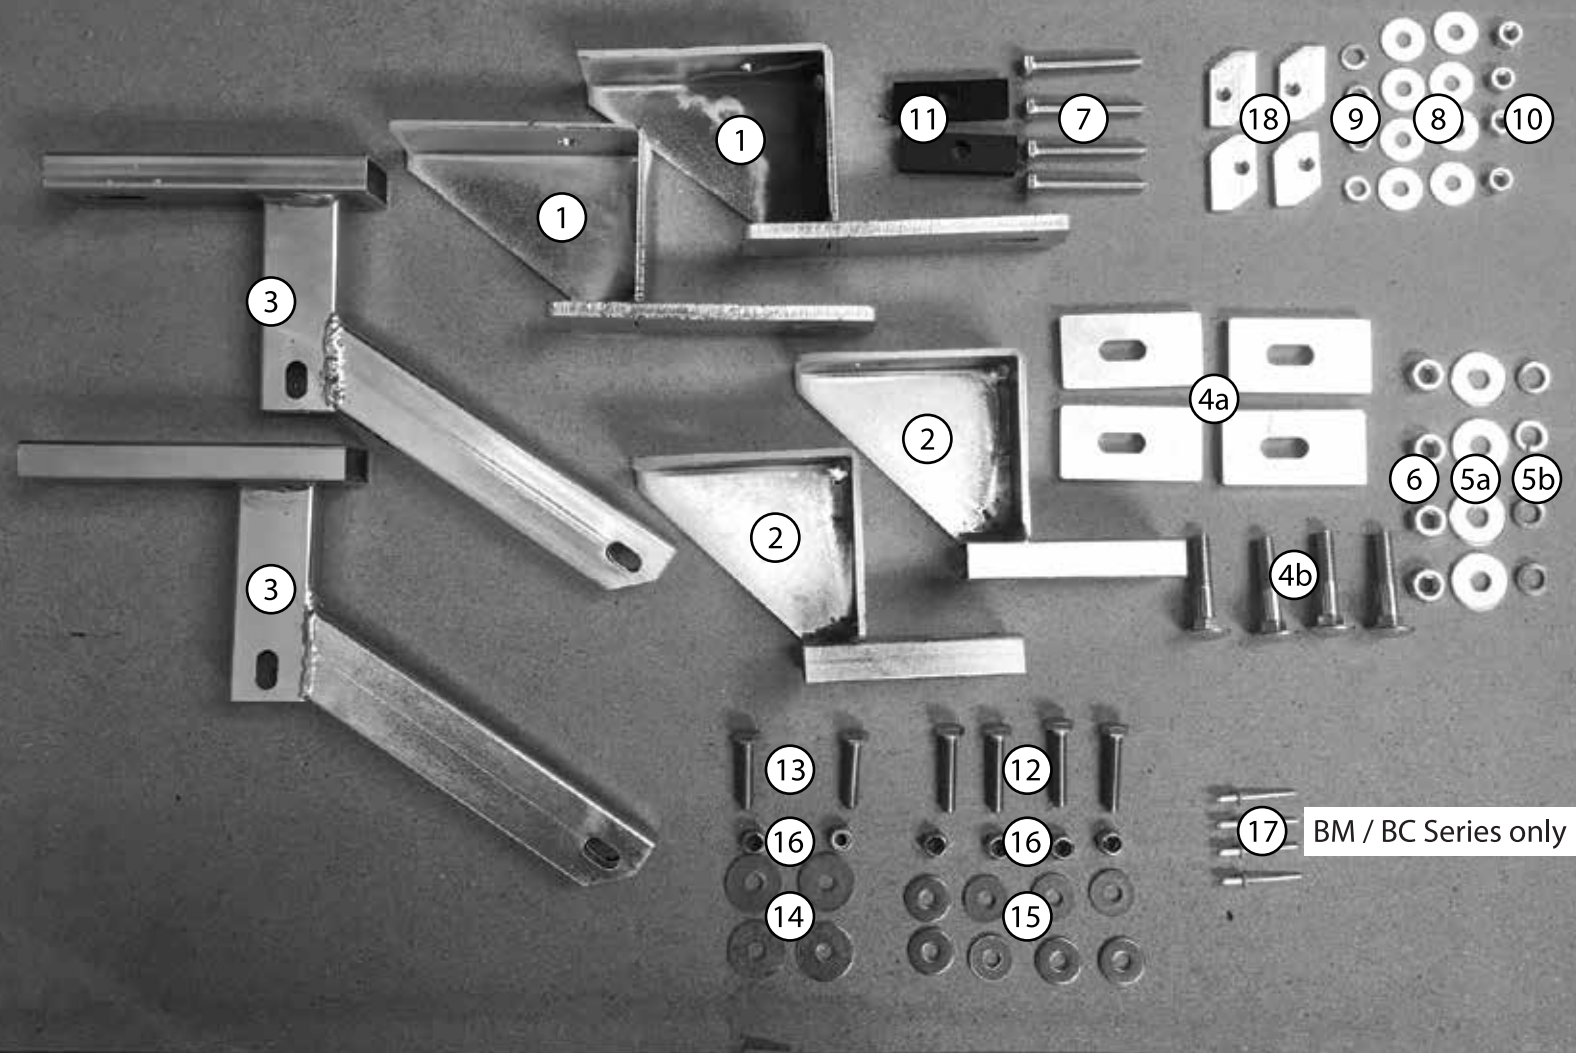

- | | | | |
|----|---------------------------------------|----|---------------------------------|
| 1 | Front bracket | 9 | M8 Spring washer |
| 2 | Rear bracket | 10 | M8 nut |
| 3 | Middle bracket (Only longwheelbase) | 11 | Plastic spacer |
| 4a | Big plate with slotted hole | 12 | M8x40 Stainless Bolt |
| 4b | M10x40 locking Bolt | 13 | M8x30 Stainless Bolt |
| 5a | M10 Washer | 14 | M8 Stainless washer |
| 5b | M10 Spring washer | 15 | M8 Stainless washer |
| 6 | M10 Nut | 16 | M8 Self locking nut |
| 7 | M8x60 Bolt | 17 | 4x12 Nail (BM/BC Series only) |
| 8 | M8 Washer | 18 | M8 Plate |

