



NOTICE:

- ≡ The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.
- ≡ Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- ≡ Please periodically check and retighten all the hardware and clean the investment for a refresh look.



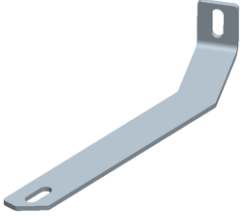

INDEX


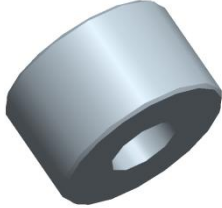
[Torque](#)
[Content](#)
[Instructions](#)

1. Torque

M8 (A2-70)	M12 (A2-70)
15 Nm	25Nm

2. Content

Name	Quantity	Picture
Frontbar	1	
Bracket Top Right	1	
Bracket Top Left	1	
Bracket Bottom	2	

Support Bottom	2	
Bushing	2	
Hex Head Screw M8x20	2	
Hex Head Screw M8x30	4	
Hex Head Screw M8x40	2	
Hex Head Screw M12x50	2	
Nut M8	4	
Washer M8, big	8	
Washer M12, big	2	
Washer M8, self retaining	8	

3. Instructions

**Mount Bracket Top Left/Right
with Hex Head Screw M8x30,
Washer Big and Self Retaining
Washer**



**Mount Support Bottom and
Bushing with Hex Head Screw
M8x40, Washer Big M8 and Self
Retaining Washer M8**



Mount Bracket Bottom with Hex Head Screw M12x50 and Washer Big M12



Mount frontbar on Top Brackets with Hex Head Screw M8x20, Washer Big M8, Self Retaining Washer M8 and Nut M8



Mount Bracket and Support Bottom with Hex Head Screw M8x30, Washer Big M8, Self Retaining Washer M8 and Nut M8



Level Frontbar and fasten all screws



DISCLAIMER: We are not responsible for any quality problems caused by improper installation and use.